

SOLAR MOUNTS LLC POST DRIVEN GROUND MOUNT INSTALLATION MANUAL



TABLE OF CONTENTS

1. Introduction
2. Safety Information
3. Tools & Equipment Required
4. Pre-Installation Guidance
5. Post Orientation and Angles
6. Post Driven Ground Mount: Main Components
7. Solar Support Installation
 - Truss and Strut Installation
 - Strut Installation
 - Z-Purlin Installation
 - Add-On Section Installation
 - Purlin Stiffener Attachment
8. PV Module (“Panel”) Attachment and Installation
9. Electrical Grounding of the Post Driven Ground Mount Structure
10. Final Inspection & Maintenance
11. Contact Information
12. List of UL 2703 Approved PV Modules

SAFETY INFORMATION

General Safety Guidelines

- Only trained personnel should perform installations.
- Always follow OSHA guidelines for fall protection and workplace safety.
- Wear appropriate PPE, including Hard hat, safety glasses, gloves, steel-toed boots, and harnesses where applicable.



Equipment Safety

- Inspect tools and equipment before use.
- Use caution when operating heavy machinery like skid steers and post drivers.



Hazard Warnings

- Be mindful of overhead power lines when lifting materials.
- Secure all materials properly to prevent tipping or falling.



TOOLS & EQUIPMENT REQUIRED

Hand Tools

- Impact Driver
- Torque Wrench
- Solar Mounts V-Clamp Pliers
- 15/16" Socket for 5/8" Bolt
- 1/2" Socket for 5/16" Bolt
- 3/4" Socket for 1/2" Bolt
- 15/16" Combination Wrench
- 3/4" Combination Wrench
- 1/2" Combination Wrench
- Come-along winch ratchet tool
- Concrete Finishing Tools



Equipment

- Skid Steer (off-load materials with forks)
- Post Jig
- Post Driver (post-pounding attachment)

PRE-INSTALLATION GUIDANCE

Working with Miss Dig



Contractors must call (811, Miss Dig) before they dig . This is typically a free service provided by the local utility company. More detailed surveys of underground utility lines, phone lines, fiber optics, water lines, etc. can be conducted using ground penetrating radar (GPR) devices.

GPR and LiDAR Data

Miss Dig is recommended for identifying and tracing public utility power lines. However, even greater detail can be gained by deploying your own ground penetrating radar (GPR) devices. GPR devices (e.g., US Radar, GSSI) can provide detailed information about private utilities, shallow and deep obstructions, as well as accurate tracing of utility lines, water lines, fiber optics, telephone lines and more. GPR can provide up to 1 cm of accuracy although 5 cm is common with the addition of GPS (GNSS).

LiDAR devices are getting smaller and more accurate. These devices can be carried by drones and provide contractors with very accurate elevations and identification of above-ground contours, as well as detailed locating capabilities that can be transferred to construction drawings for the site.

Post Driven Ground Mount System Ratings

Wind Load	180 mph
Snow Load	60 lbs.
Fire Rating	Class C (tilt 10-30°)
Maximum Size	2-High + 2 Cantilever, 4' height from ground
PV Module Orientation	South
Grounding/Bonding Rating	UL 2703, UL 467
Mechanical Rating	UL 2703
# of PV Modules per section (Solar Mounts sections called "Starts" and "Adds")	Six PV modules for 1-High, Twelve PV Modules for 2-High, 18 PV modules for 3-High


UL 2703 Ed.1 and TIL No. A-40 Mechanical Load ratings:

PV module constructions same as Type 1 or 2 –Module Area up to 33.4 sq ft	
Downward Design Load (lb/ft ²)	16.8
Upward Design Load (lb/ft ²)	16.8
Down-Slope Load (lb/ft ²)	5.0

PV module constructions same as Type 29 –Module Area up to 27.8 sq ft	
Downward Design Load (lb/ft ²)	16.8
Upward Design Load (lb/ft ²)	16.8
Down-Slope Load (lb/ft ²)	5.0



POST DRIVEN GROUND MOUNT: MAIN COMPONENTS

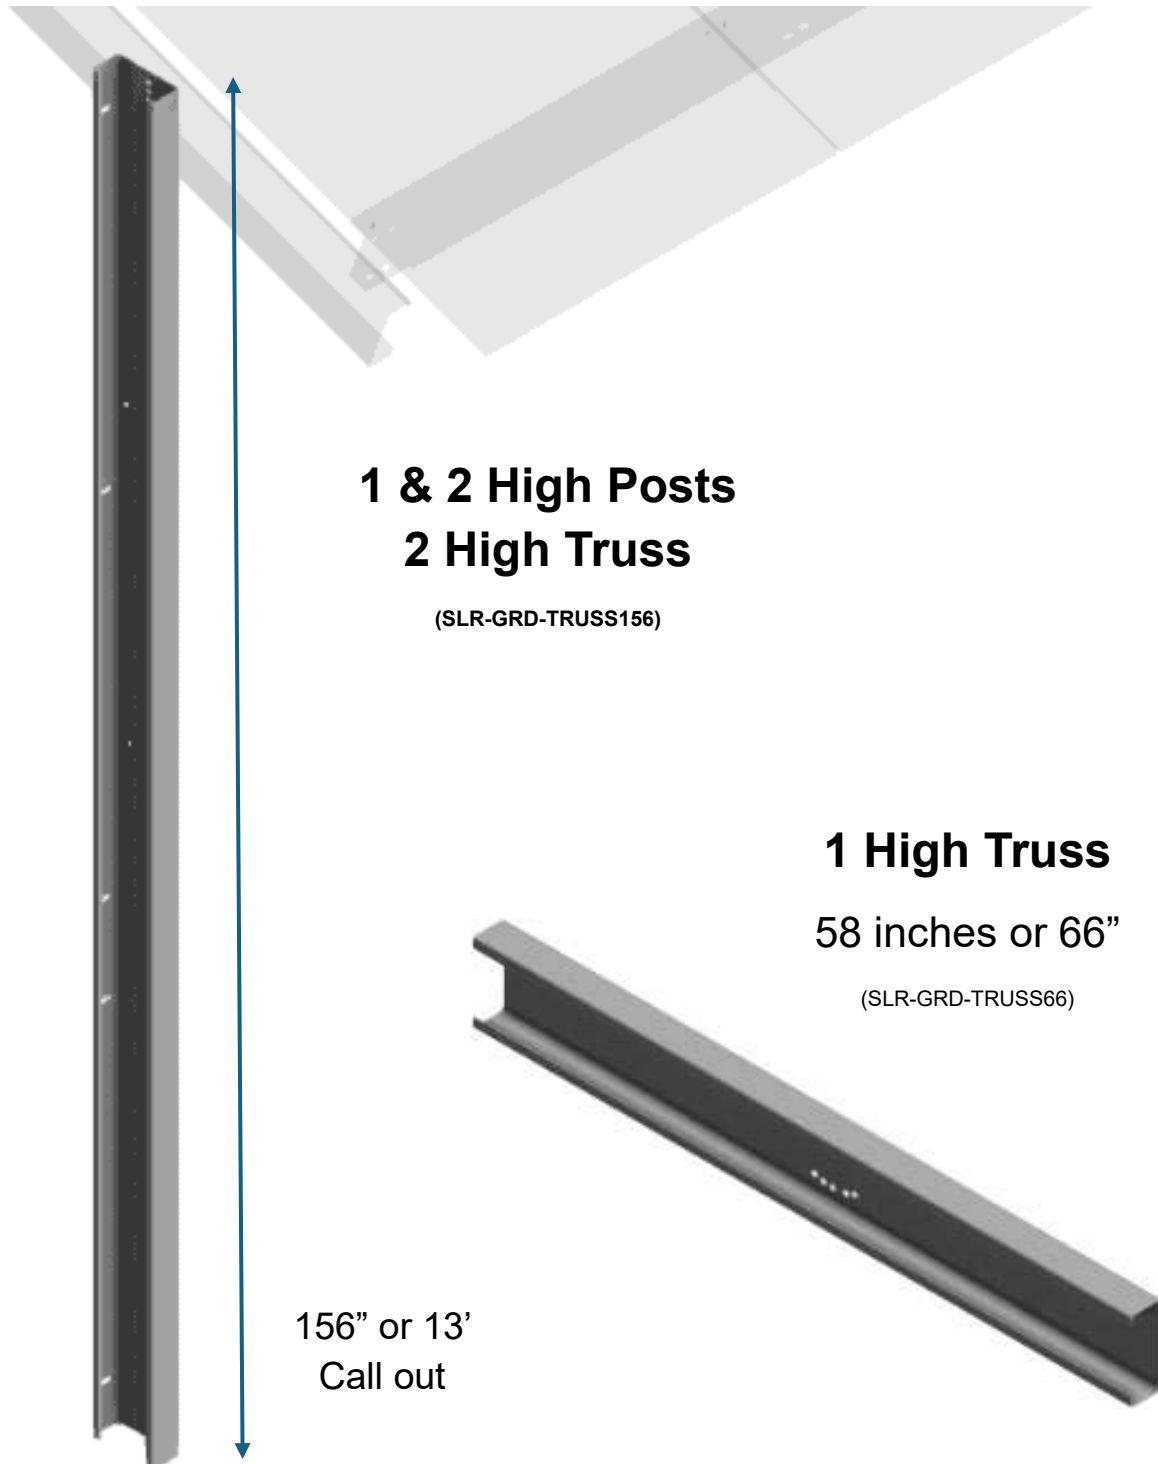


POST DRIVEN GROUND MOUNT: MAIN COMPONENTS




**Purlin
Stiffener**

(SLR-CPT-PURLIN-STIFF)

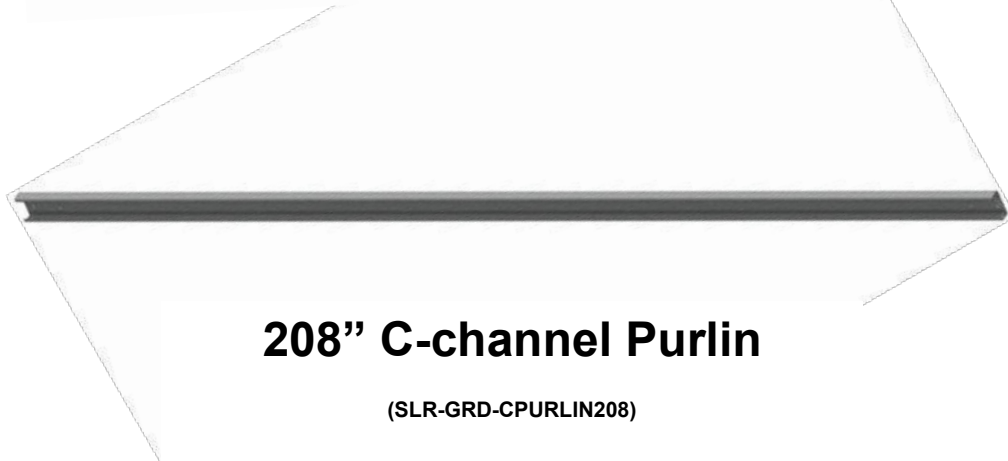

208\"

(SLR-GRD-CPURLIN208)

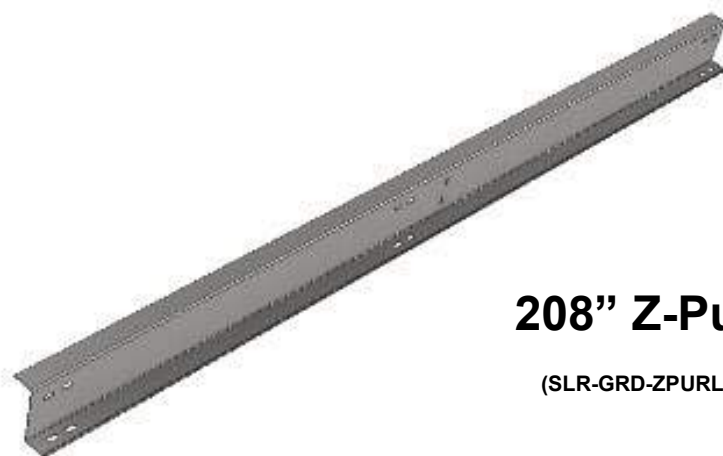

208\"

(SLR-GRD-ZPURLIN208)

POST DRIVEN GROUND MOUNT: MAIN COMPONENTS




Mid-Clamp

(SLR-CLMP-HW-MID)



End Clamp


(SLR-CLMP-HW-AKS-END)

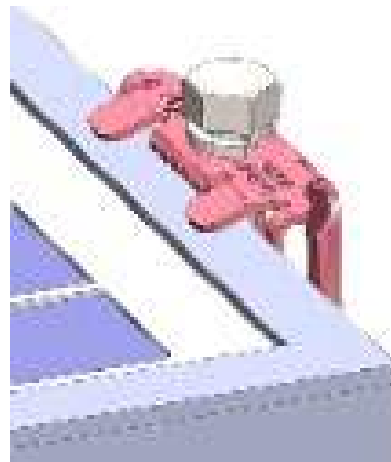

POST ORIENTATION AND ANGLES

The elevation of the truss can be adjusted using corresponding holes for correcting elevation and depth issues in the post pounding

Adjustments are made in 1" increments

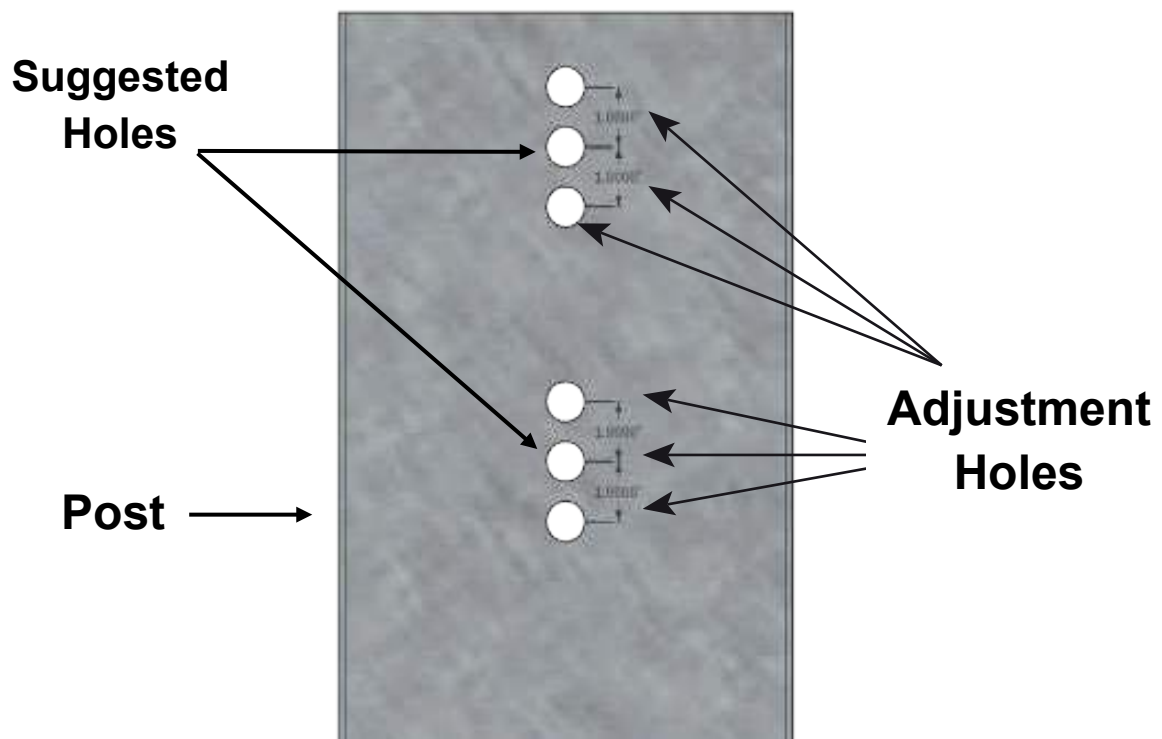

POST ORIENTATION AND ANGLES

IF DESIRED ANGLE IS


5°, 15°, 25°, OR 35°, FLAT SIDE OF C-
CHANNEL POSTS WILL FACE

EAST



204" in. +/- 1.00"

FLAT SIDE OF C-CHANNEL
POSTS FACING EAST

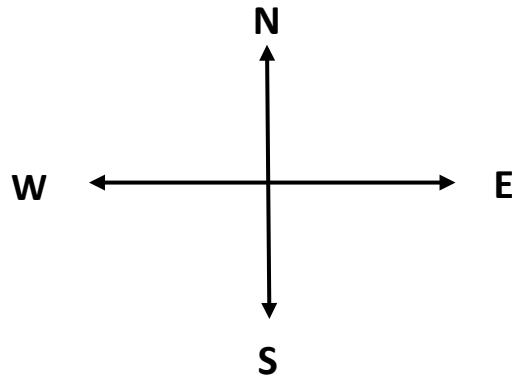

IF DESIRED ANGLE IS

0°, 10°, 20°, OR 30°, FLAT SIDE OF
C-CHANNEL POSTS WILL FACE

WEST




204" in. +/- 1.00"

FLAT SIDE OF C-CHANNEL
POSTS FACING WEST

TRUSS AND STRUT INSTALLATION

- Fasten 5/8" bolt through pivot hole in truss and into post driven or C-Post (hand tighten the nut)
- Select desired angle (see SMLLC drawings)
- Fasten 5/8" bolt through truss at desired angle location
- Tighten to 60 ft. lbs.

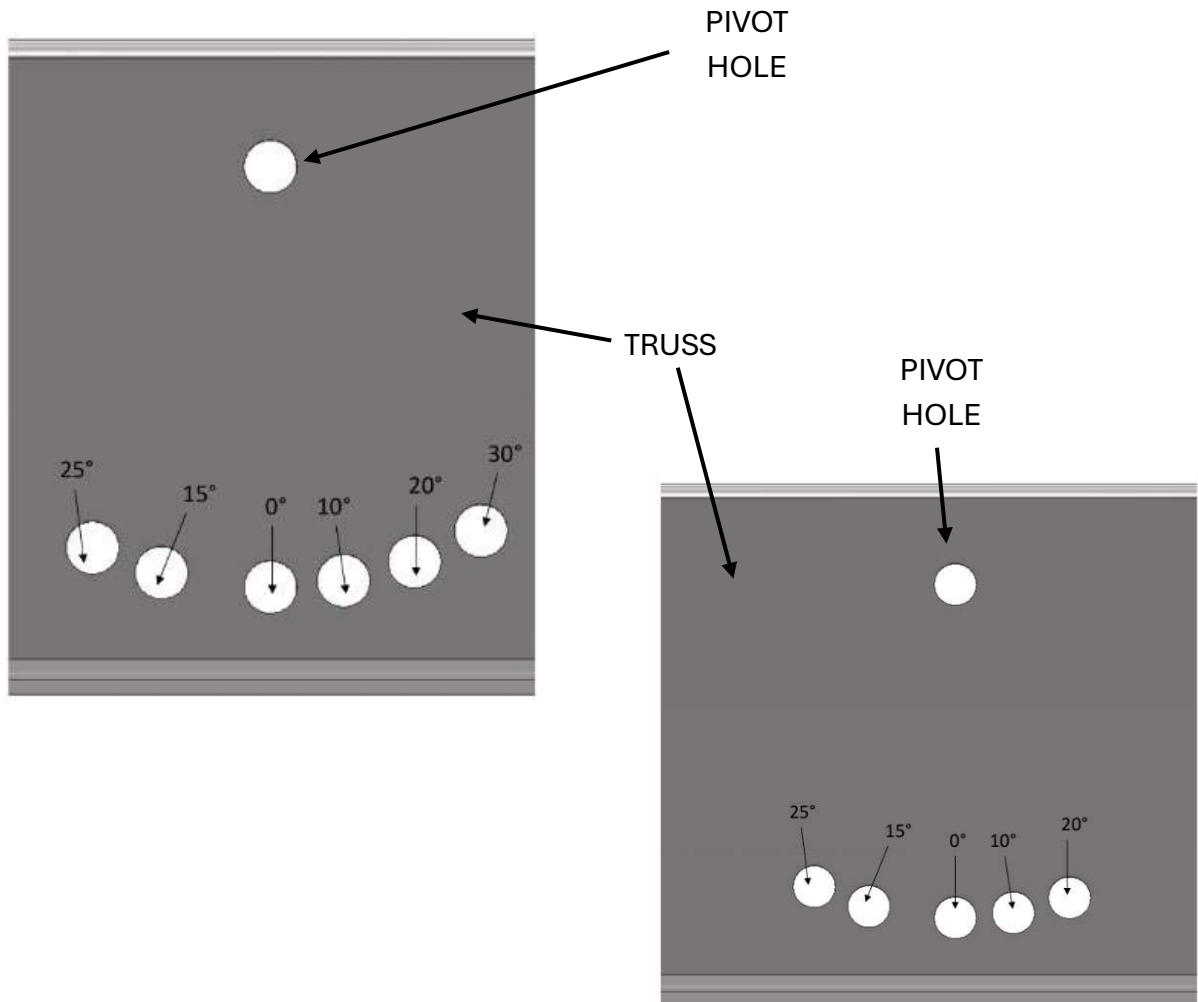

TRUSS AND STRUT INSTALLATION




5/8" – 11 X 1.5 GR5 SERRATED
FLANGE BOLT (X2)

5/8" – 11 GR5

SERRATED FLANGE NUT (X2)


STRUT INSTALLATION (2-High only)

- Always start with the post bolt hole location when attaching both upper and lower struts
- Align and hand tighten lower strut with $\frac{1}{2}$ " bolt and nut
- Use strut bracket to put upper strut in proper, working location (start with lower bolt location first, strut bracket attachment to truss using $\frac{1}{4}$ " self-tapping screws)
- Attach upper strut to strut bracket with $\frac{1}{2}$ " bolt and nut
- Tighten hardware to 50 ft. lbs.

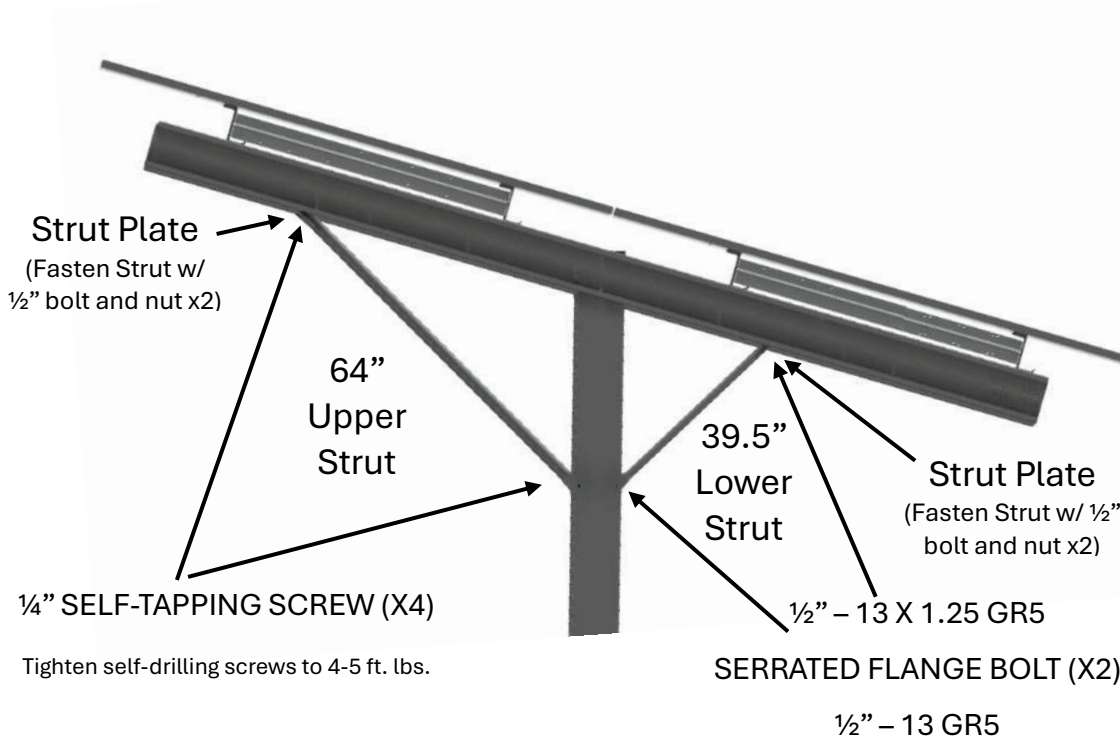


PURLIN INSTALLATION (for single section, 2 high posts)

- Attach Z-Purlins to truss as pictured using 1/2" flanged bolt and flanged nut.
- Make sure all purlins are pointing North (Northern hemisphere installs)
- Before tightening, see next page for Add-On section install and Purlin overlap
- Tighten hardware to 50 ft. lbs.

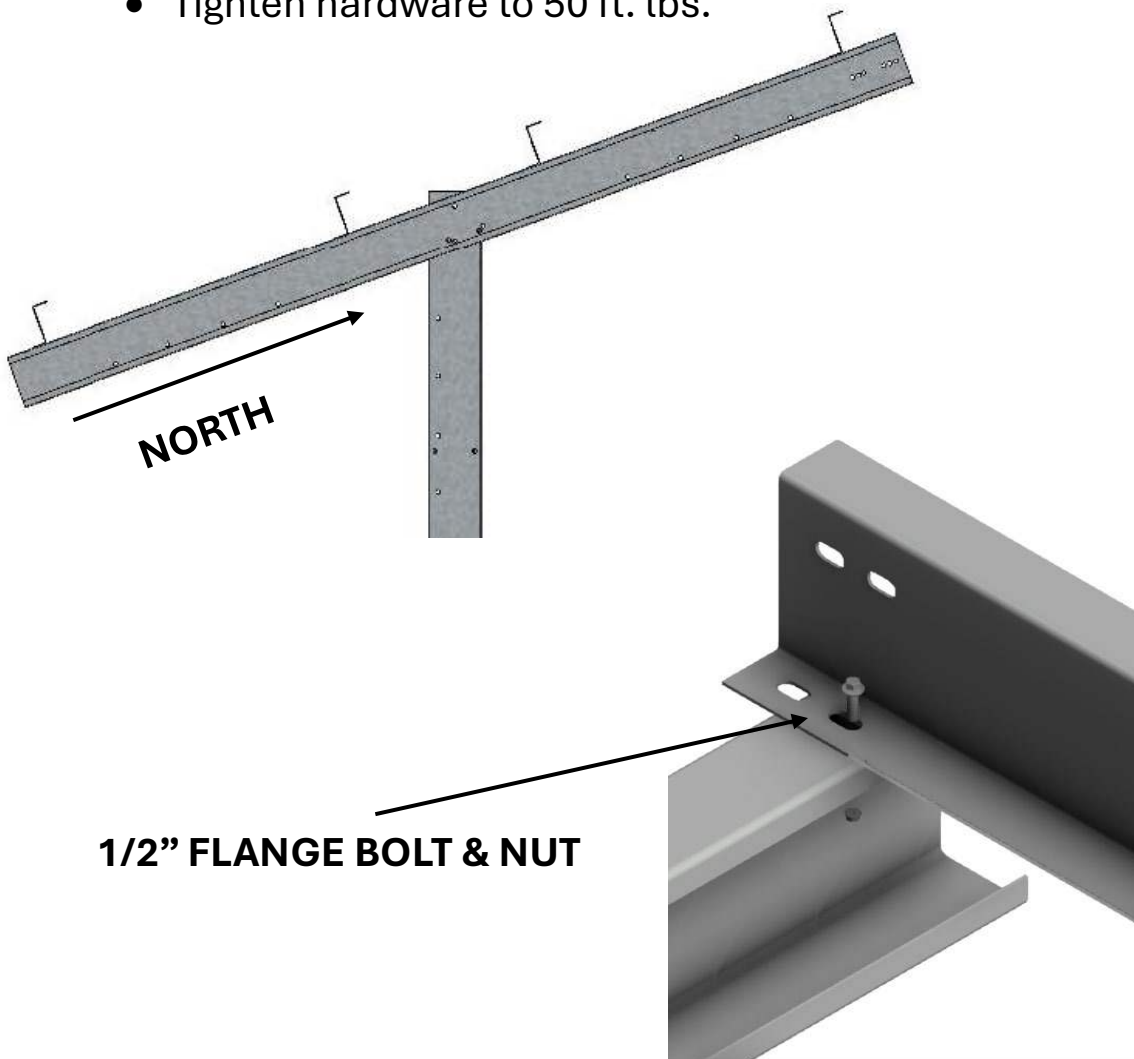


ADD-ON SECTION INSTALLATION

- Overlap Add-On section Z-Purlin, and use shared bolt hole locations
- Secure into place with ½” bolt and nut
- Tighten hardware to 50 ft. lbs.

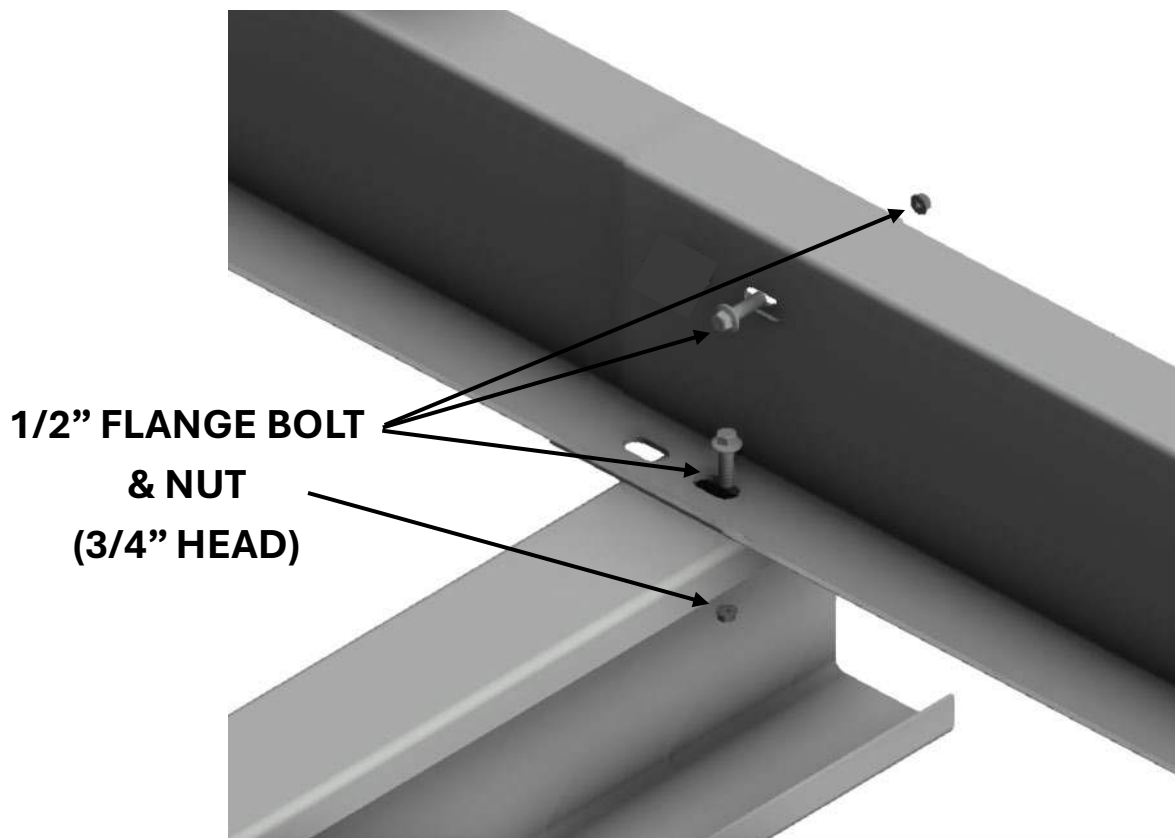

PURLIN STIFFENER ATTACHMENT

- See SMLLC drawings for appropriate spacing
- Compress V-Clamp with SMLLC V-Clamp Vise-Grip type pliers or needle nose pliers and release in position
- Attach stiffener to purlins with 5/16" serrated flanged bolt & nut. Tighten to 50 ft. lbs.
- NOTE: Technicians can install in the field or use a jig to pre-assemble

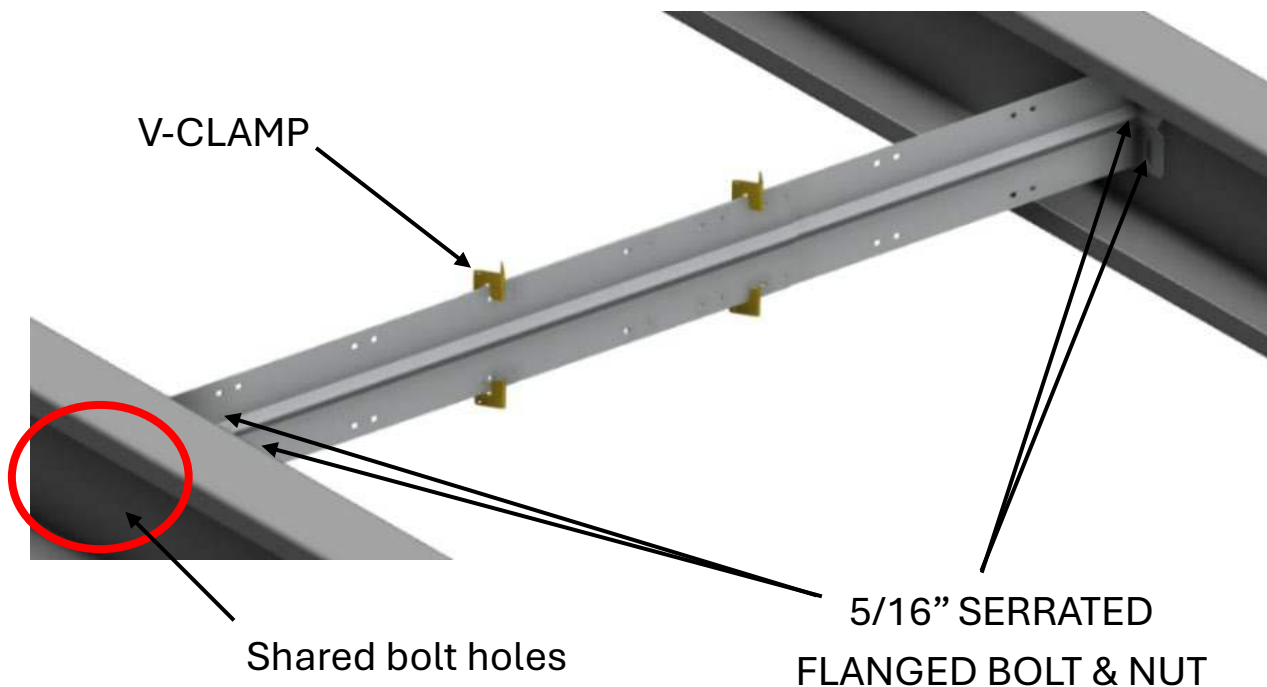

PV MODULE (PANEL) ATTACHMENT AND INSTALLATION

- Place PV module (“panel”) on Z-Purlins
- Secure PV module in place with end clamps.
 - Tighten PV Module End Clamp bolts to 8-10 ft. lbs.
 - **Use 2 clamps for each side of the PV module**
- Place second PV module on purlins in line with first panel.
- Secure the two PV modules together with the mid clamp as pictured.
 - Tighten to 8-10 ft. lbs.




M

MID-CLAMP ON DIAGRAM



E

END CLAMP ON DIAGRAM

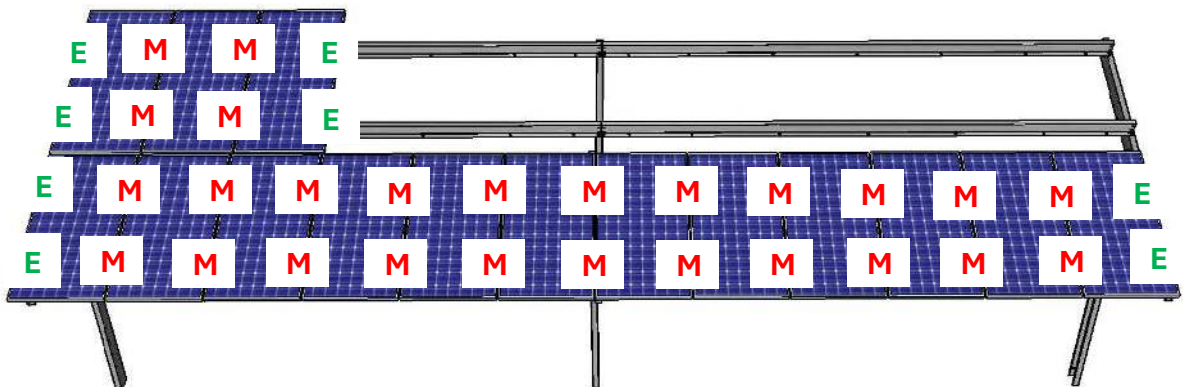

ELECTRICAL GROUNDING OF THE POST DRIVEN GROUND MOUNT PV SUPPORT STRUCTURE

- Solar electric contractors must electrically ground the structure to a single premises ground. If more than one Ground Lug is attached to the structure, all these ground points and EGC's must be properly bonded together.
- Please see NEC Article 690.41, 690.47(C)(3), 250.52 and 250.53(A) for guidance.
 - The recommended approach is to use a separate DC grounding electrode for the PV array and Solar Mounts post driven ground mount PV support structure, as this enhances protection against lightning and transient voltage. For lightning protection associated with grounding systems, refer to NEC 250.106.
- Attach the Ground Lug (e.g., Ilesco GBL Grounding Lugs, Part #18-GBL-4DBT or equivalent) to the C-channel post using a #10 self-drilling screw (zinc or stainless steel, e.g., 1 ¼") so that the lug is flush with the post.
- The Ground lug can be fastened to the C-channel post at any location along its length. Tighten to 5 ft. lbs.
- CAUTION: PV module removal may disrupt the bonding path and could introduce the risk of electric shock. Additional steps may be required to maintain the bonding path. Modules should only be removed by qualified persons in compliance with the instructions in this manual



FINAL INSPECTION & MAINTENANCE

- Check all driven posts for proper alignment, with respect to other posts. Check soil conditions, and ground “anomalies” (loose soils, animal tunnels, hard obstructions, etc.). Backfill holes, straighten posts that are not level, etc.
- Any loose components or fasteners shall be re-tightened in accordance with these instructions
- Any components showing signs of damage that compromise safety that be replaced immediately.
- Check all Post, Strut and Purlin bolts and nuts for tightness (torque test).
- Check PV array to ensure all PV modules are clean and unbroken.
- Check all PV module mid-clamps and end clamps are tightened to specification.
- Periodically inspect the structure for signs of wear or loosening. Periodically check for any animal or vegetative interaction or interference with the structure and/or PV modules.

CONTACT INFORMATION

For general questions or for SMLLC designated sales rep, please contact:

Solar Mounts LLC

Website: <https://solarmounts.com>

Phone: (844) 757-7225

Warranty

To obtain the Solar Mounts LLC warranty, please fill out the SMLLC Commissioning Form for each project site and return to Solar Mounts, LLC.

(NOTE: The SMLLC warranty starts at delivery of materials to customer site.)

List of Approved PV Modules (“Panels”) for UL 2703 listed Solar Mounts, LLC Solar Support Structures*

Solar Mounts, LLC. support structures are certified to UL 2703 for electrical grounding/bonding and mechanical requirements. Solar Mounts, LLC. system owners retain this certification when support structures are used only in combination with PV modules listed in the chart below.

*Please contact Solar Mounts, LLC for the latest list of approved PV modules

Module Manufacturer	PV Module Model Number
Aptos	DNA-120-BF10-xxxW
Boviet Solar	BVM6612M-XXXS-H-HC-BF-DG
Canadian Solar	CS6W-xxxMS
Canadian Solar	CS7N-XXXTB-AG
Canadian Solar	CS6W-xxxMB-AG
Canadian Solar	CS6.1-54TM-xxxH
HT Solar (HT-SAAE)	HT72-18X (ND)-F
Imperial Star	ISM7-SHSB156-xxxM
JA Solar	JAM72D40-xxx/LB
JA Solar	JAM72D42-xxx/LB
JA Solar	JAM72D30-xxx/MB
Jinko	JKMXXXM-72HL4-TV
Jinko	JKMXXXN-72HL4-BDX
Jinko	JKMXXXN-72HL4-BDV
Jinko	JKMXXXN-78HL4-BDV
Longi	LR7-72HGD-XXXM
Longi	LR8-66HYD-XXXM
Longi	LR7-72HYD-XXXM
Maxeon	SPR-P6-XXX-UPP
Mission Solar Energy	MSN10xxxHN4G
Mission Solar Energy	MSN10xxxHT4T
Panasonic	EVPVxxxHK2
Peimer USA	DR10HxxxMB
Peimer USA	SFxxxM
Philadelphia Solar	PS-MNB108(HCBF)-xxxW
Phono Solar	PSxxxM8GF-24/TNH
Phono Solar	PSxxxM8GFH-24/TNH
Q Cells	Q.PEAK DUO ML-G12S
Q Cells	Q.PEAK DUO XL-G11S



REC	RECXXXAA PRO M
REC	RECxxxAA Pure
REC	RECXXXAA PURE-RX
SEG	SEG-xxx-BTC-BG
SEG	SEG-xxx-BTC-BG
SEG	SEG-495-BTD-BG
Silfab	SIL-620/630/640 XL
Silfab	SIL-520 QM
Silfab	SIL-420/430 QD
Trina	TSM-DEG19RC.20
Trina	TSM-NEG21C.20
Trina	TSM-DEG21C.20
Trina	TSM-NE09RC.05
Trina	TSM-NEG19RC.2
Waree	BiN-08-xxx
Waree	Bi-62-xxx
Waree	Bi-55-xxx